 




SMART LOCK SYSTEM START UP

- 1. Open the cover off the battery**
- 2. Long press the, “reset”, button on the back panel for 5 seconds**
- 3. Press, “000#,” to complete initialization**

6 WAYS TO UNLOCK

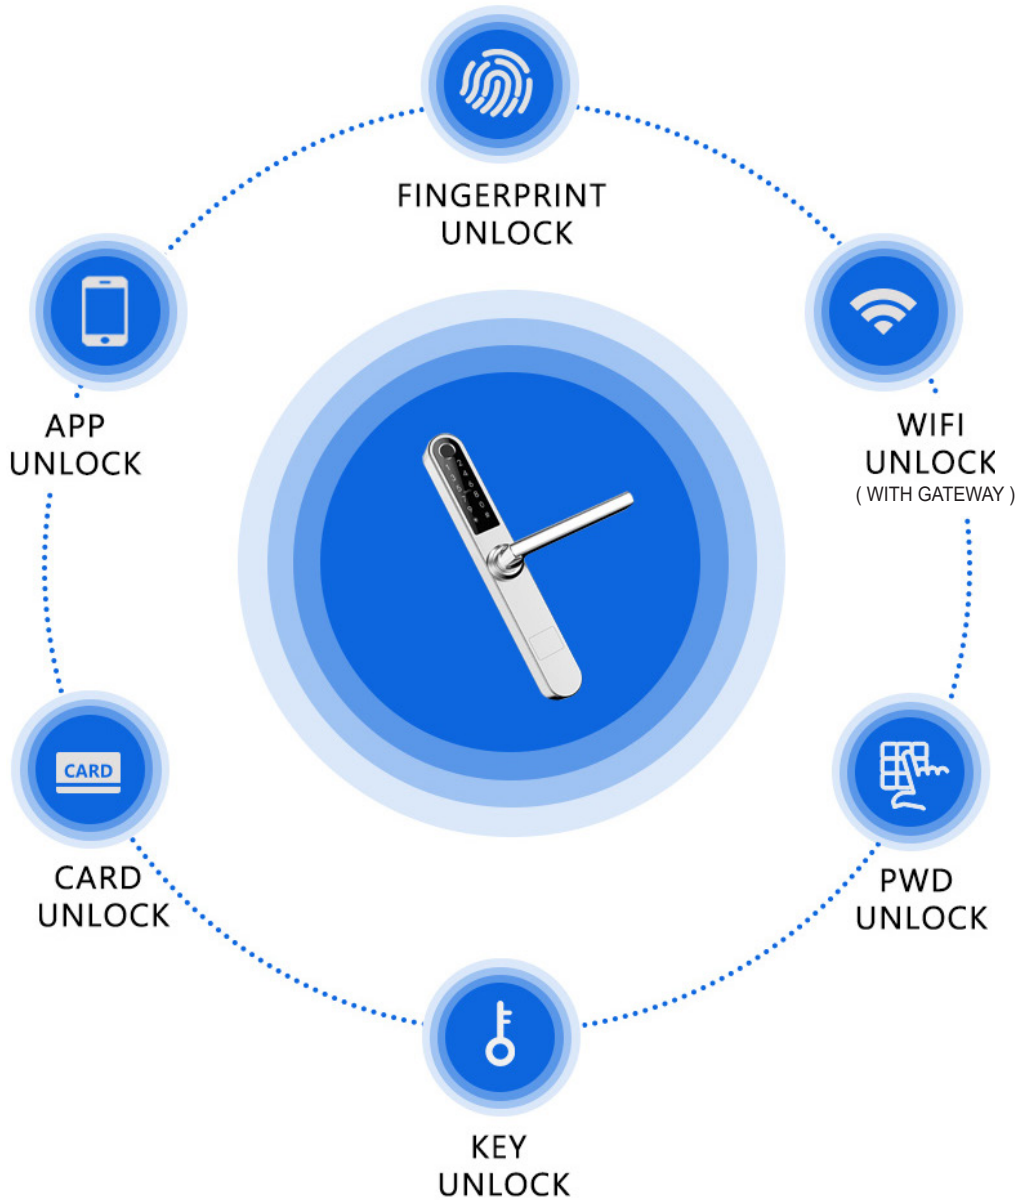

GATEWAY KEY FEATURES

- The gateway is a bridge between smart locks and home WIFI networks.
- The user can remotely view and calibrate the time of the lock, read the unlocking records.
- Connect your mobile phone to the WIFI network which the gateway is connected to.



Smart Lock

- Bluetooth access
- WIFI access from any place
- Time attendance
- Ekey management
- Fingerprint management
- Unlocking records
- Remaining batteries/ Passage Mode Setting/ Volume setting/ System upgrade & more
- Add/delete cards
- Pin code management
- Create and share ekey remotely
- Create and share pin code remotely

Send eKey, Generate Passcode, Attendance, eKeys, Passcodes, IC Cards, Fingerprints, Records, Settings

Available on the App Store
GET IT ON Google Play

| SEND EKEY |
SENDING A EKEY WILL ALLOW CONTROL ON MULTIPLE ACCOUNTS

Send eKey

Timed Permanent One-time Cyclic

Recipient: [Enter Recipient's Account]

Name: Please Enter a Name for this eKey

Start Time: 2020.01.21 20:06

End Time: 2020.01.21 21:06

Authorized Admin:

Send

| TIMED CODES |
IDEAL FOR RENTALS, GUESTS, AIRBNB AND MUCH MORE

Generate Passcode

Permanent Timed One-time Erase Custom

Start Time: 2020.01.21 20:00

End Time: 2020.01.21 20:00

This Passcode MUST BE used at least Once, within 24 hours, after the Start Date and Time or it will be SUSPENDED for Security Reasons.

Generate Passcode

| ONE-TIME CODES |
IDEAL FOR SINGLE ENTRY GUESTS, TRADESPERSON AND MUCH MORE

Generate Passcode

Permanent Timed One-time Erase Custom

Passcode: 58424432

Name: Jenry

This Passcode MUST BE used within 8 hours from the Camera Time or it will be SUSPENDED for Security Reasons. This Passcode can ONLY be USED ONCE.

Generate Passcode

| CYCLIC CODES |
IDEAL FOR RENTALS, GUESTS, AIRBNB AND MUCH MORE

Generate Passcode

Permanent Timed One-time Erase Custom Cyclic

Mode: Tuesday

Start Time: 08:00

End Time: 11:00

 
Passcode: 324547768

Name: House Cleaner

This Passcode MUST BE used at least Once, within 24 hours, after the Start Date and Time or it will be SUSPENDED for Security Reasons.

Generate Passcode


SLIM SERIES

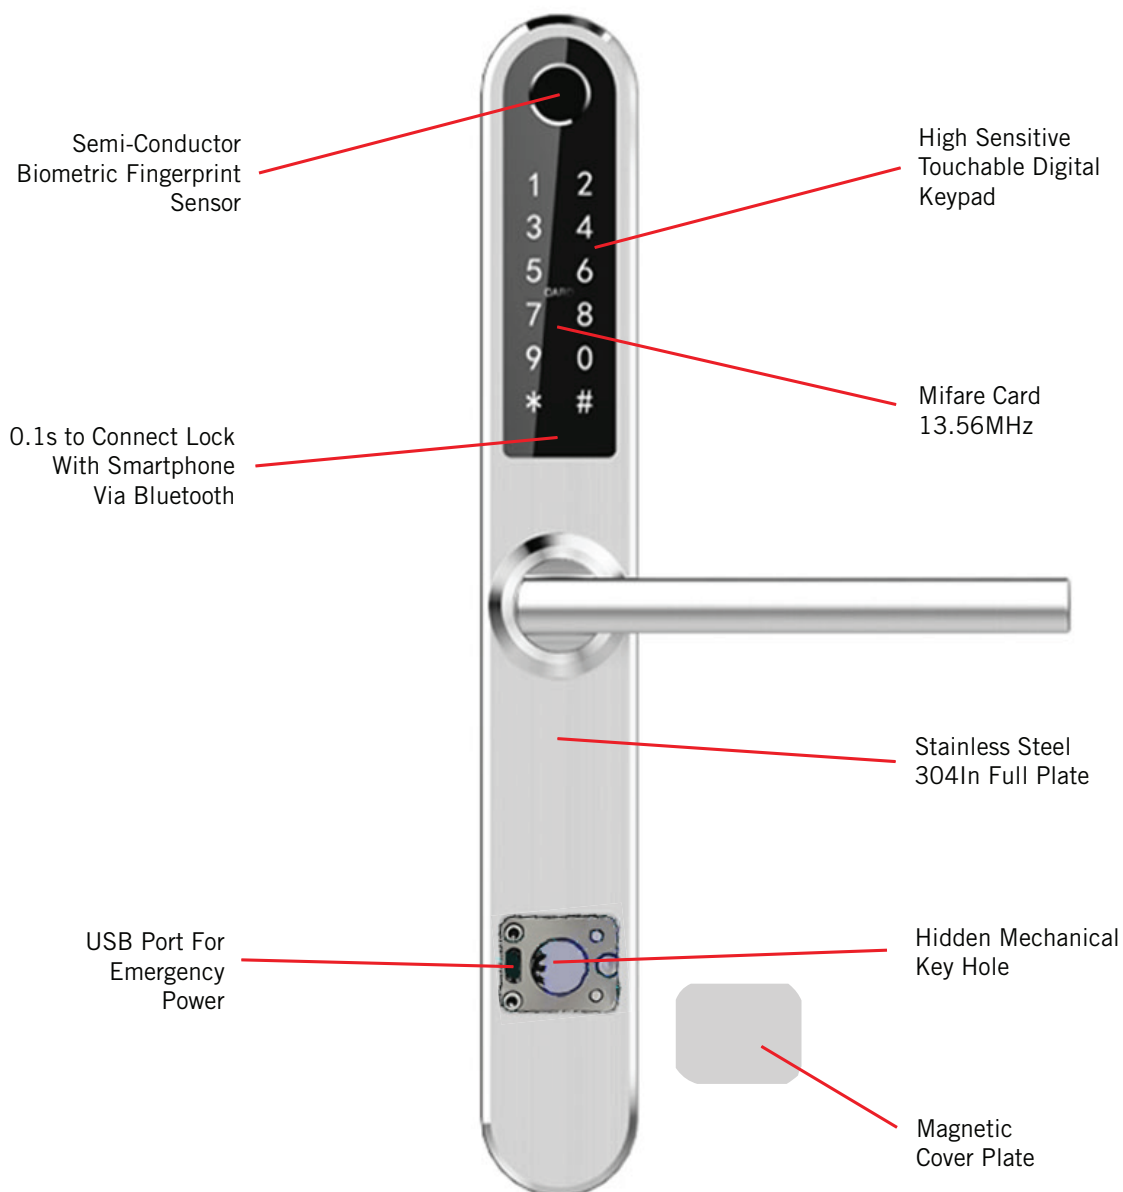

KEY FEATURES

- Ultra-slim 38mm stainless steel panel, waterproof IP55
- Compatible with Roto Multipoint Door Locks
- Lever operated to activate deadbolts
- APP to manage the lock from any place, compatible with Amazon Alexa and Google Home
- Anti-theft, Random pincode, AES 256 encryption
- Service life of Electronic part $\geq 200,000$ times
- Service life of Mechanical part $\geq 200,000$ times
- Anti-smashing, Anti-sawing
- Suitable for Aluminium, Timber, Security and uPVC Doors.

 HANDLE OPTIONS

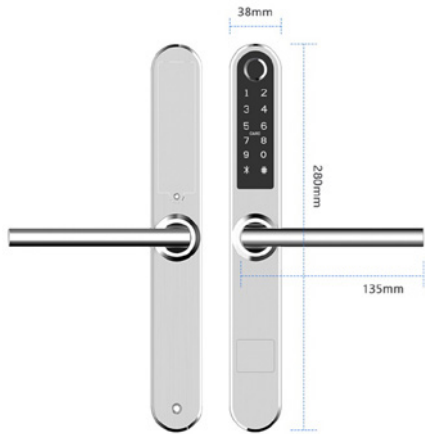

AL-S31 SS
Stainless Steel



AL-S31 BK
Black



 
Lock Better. Live Better.

Smart Lock User Manual

Special Attention:

1. Please keep mechanical key on person as you exit in case a manual override is required.
2. Please change the batteries when notified by low wattage alarm.

1. Lock Structure

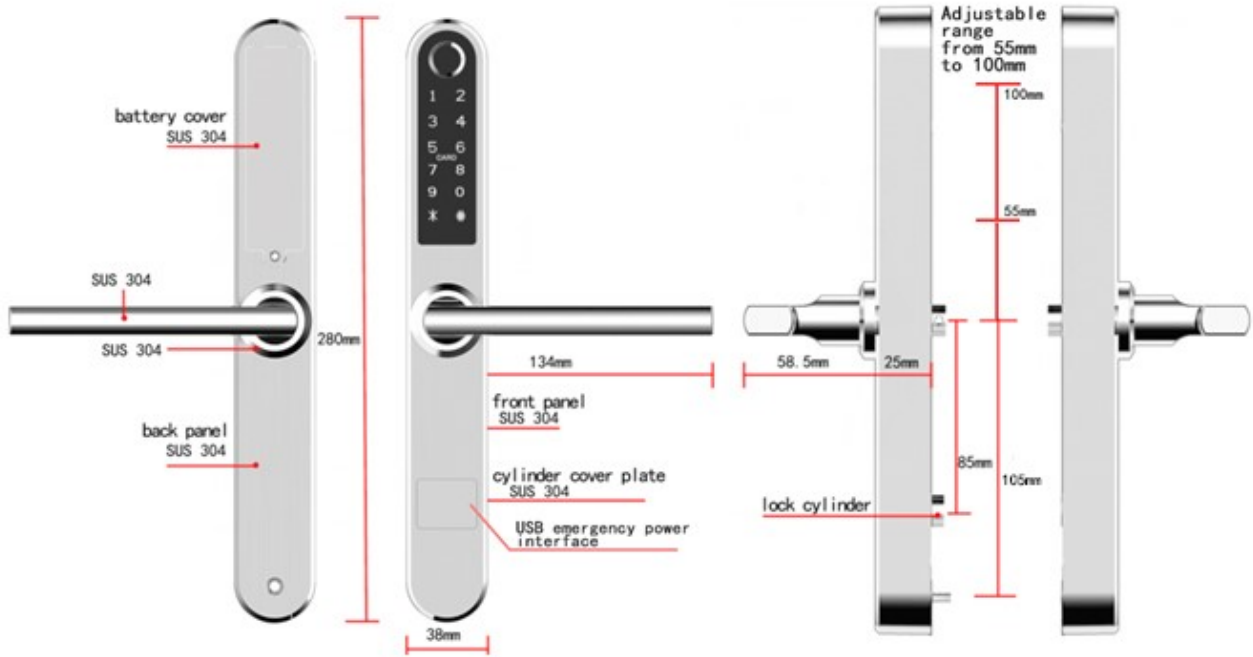

System Initialization

Open the cover of the battery, long press the "Reset" button on the back panel for 5s, press "000#", and the initialization is complete



5.Registration



5.1 Connect lock to the phone

- 1) Android mobile phone, please scan the left QR code as above
- 2) Apple mobile phone, please scan the right QR code as above
- 3) You can also search for AUSLOCK in the APP store or Google play for download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) Touch the locks screen to light up the buttons, on App click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re-name the lock
- 8) The lock is added successful

Login Register

Phone number/Email

Password

Login

Forgot Password?

1-1

← Register

Phone Email

Country/Region Australia +61

Enter your Phone number

Password between 6-20 chars

Confirm Password

Verification Code Get Code

Register

1-2

Login Register

 
 
 
 
 
18008466240

.....

Login


Forgot Password?

1-3

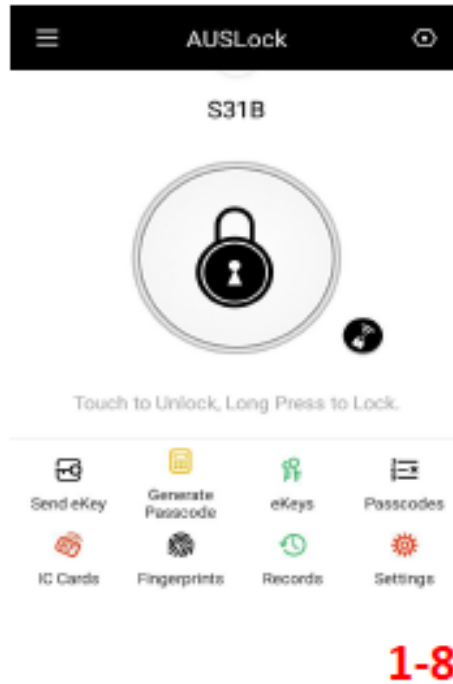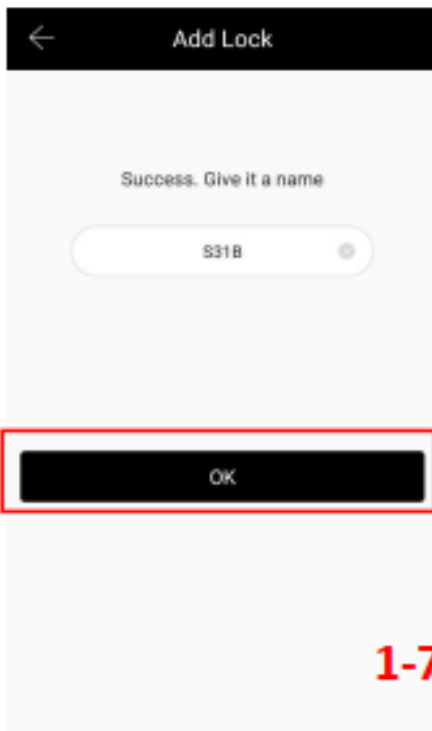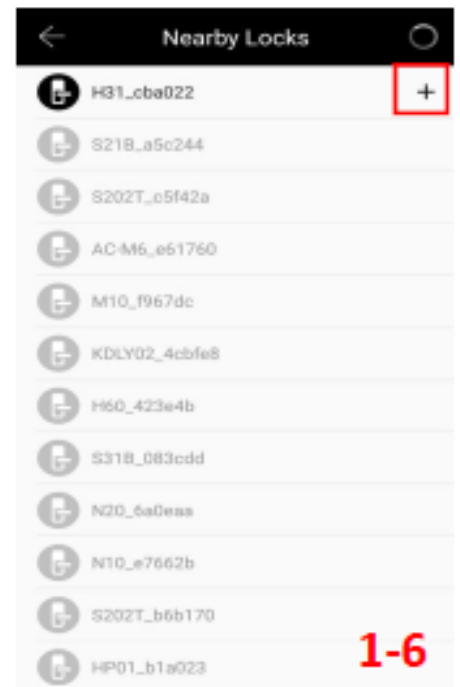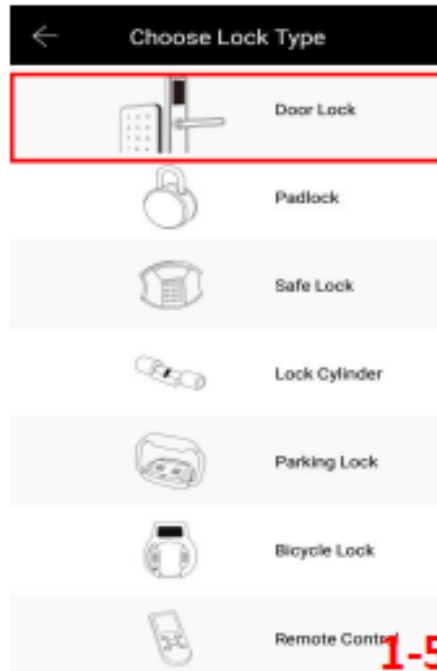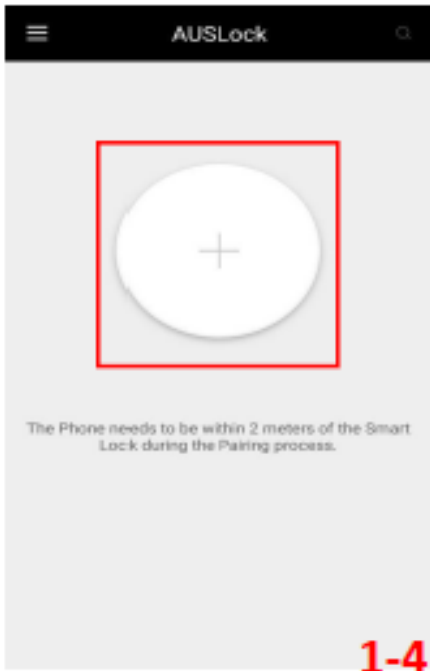


5.2 User Management


5.2.1 Bluetooth management

After mobile phone and door lock connected, Click " " as show as figure2-1 to unlock. (Make sure the phone is within 5 meters from the door lock)


5.2.2 Remote control management(Optional)

After confirming that your phone and door lock are connected to the gateway, Click " " as show as figure 2-1 to unlock. You can unlock it anywhere you have a network connection. (How to set up the gateway to connect to your phone refer to step 5.3)


5.2.3 e-Key management

Click on the " Send eKey " as shown in figure 2-1,you can send the eKey to other users of AUSLOCK to authorize the unlock (the receiver must be download the APP and register an account) → Enter recipient's account of AUSLOCK, set the name and effective time of the eKey as shown in figure 2-2→ Send→ The recipient's account has Bluetooth unlock permission


5.2.4 The Admin password management

Click " Settings "as shown in figure 2-1→ See Basic → Admin Passcode as shown in finger2-3→ input Passcode on the keypad of lock → “#”to unlock.



5.2.5 Dynamic password management

Click " Generate Passcode "as shown in finger 2-1→ finger 2-4 You can set the effective time and effective number of passwords→ Generate password→ Input password to unlock.

5.2.6 Unlock records

 
Click " Records "as shown in finger 2-1→ you can query your unlock record as shown in finger 2-5

5.2.7 IC Cards management


Click "  " as shown in finger 2-1→Click "  "→Add IC Cards as finger 2-6



2-1

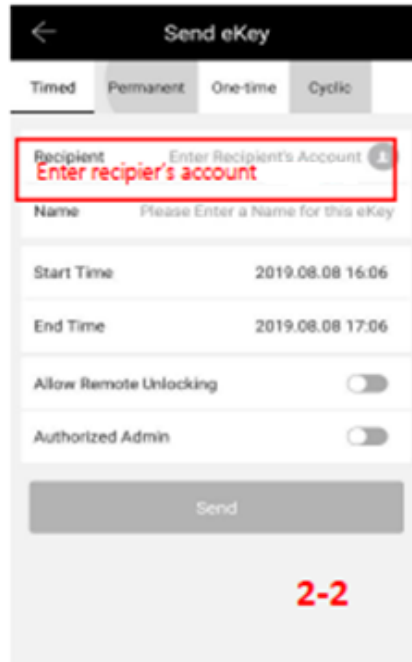


2-2

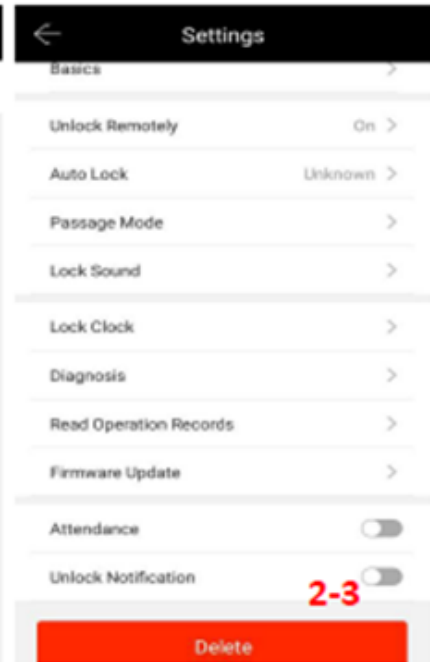 


2-3



 2-4

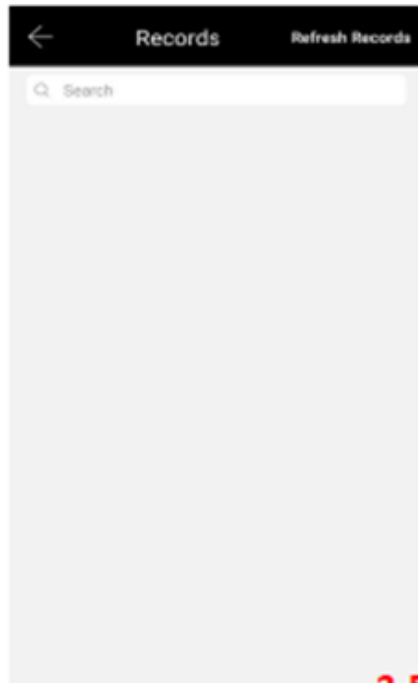

2-5

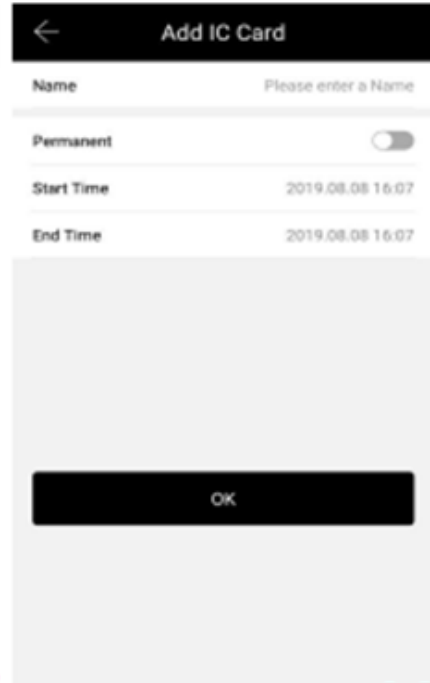 




2-6

5.3 Add Gateway(Optional)

Light Status

 


When the gateway is powered on:

-  Light flashes alternately in red and blue:
Stand-by mode, ready for pairing
-  Blue light: Working mode
-  Red light: Network failure

Pair the Gateway with APP

1 Activate the APP

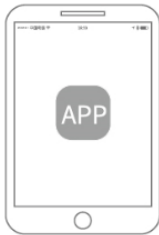


2 Press "☰"




3 Select [Gateway]



 4 Select [G2]

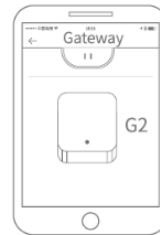

 5 Plug in the gateway and power it on, while the light flashes alternately in red and blue



6 Press "+" sign



7 Add Gateway



8 Select the network and fill in the password



9 Add complete

▲ Notice: If times out, please power off and try it again.

Guarantee



(To Validate warranty, below details must be filled by customer and emailed back to Auslock within 30 days or else Auslock may not offer full services (au@auslock.net)

Customer Full Name : _____

Customer Contact No. : _____

Place of Purchase (store) : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- 1) Please keep this card so that you can use it when you need warranty service.
- 2) We provide you with a one-year warranty from the date of purchase.
- 3) This warranty service is valid for customers in any country in the world.